
UND MESSING Series


WALL THREAD
Installation

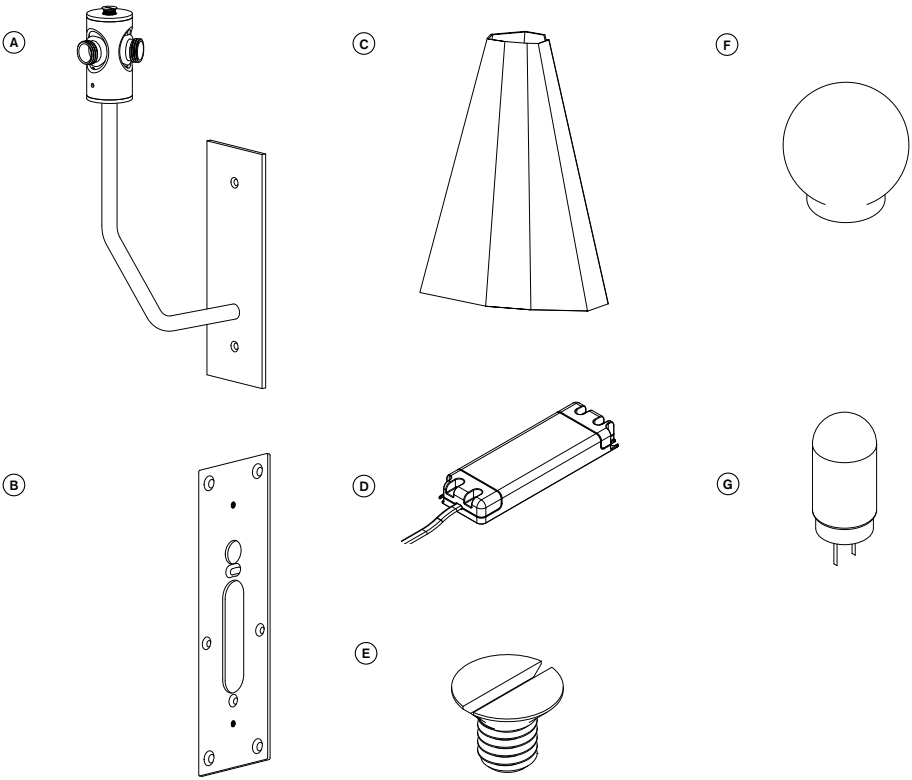

COMPONENTS


A. Fitting Assembly
B. Wall Plate
C. Brass Shade
D. 12V Driver
E. Wall Plate Screw [x2]
F. Glass Diffuser [x9]
G. LED Luminare [x9]

Not supplied: Wall Fasteners [×4] / J-Box Fasteners [x2] to be supplied by the site installation team to ensure suitability for substrate, installation conditions and applicable local regulations.

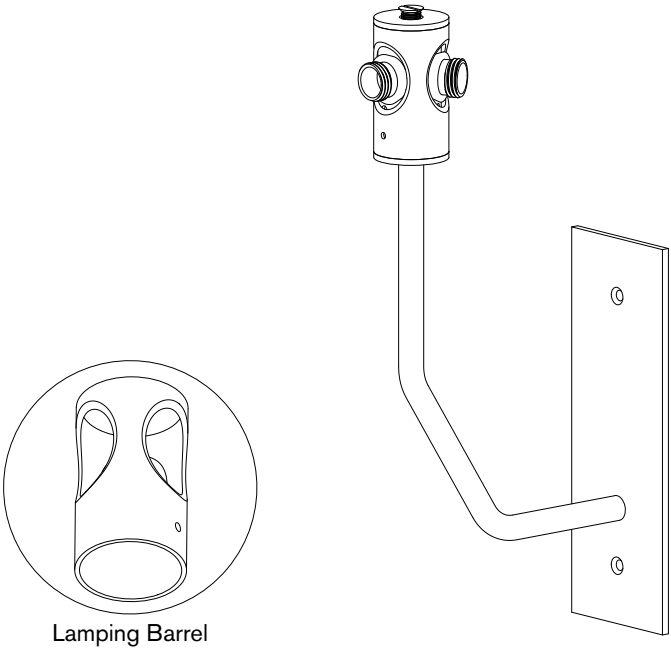

Lamping Barrel


Step 1. Take the Fitting Assembly Ⓐ and take note of the Lamping Barrel (pictured).

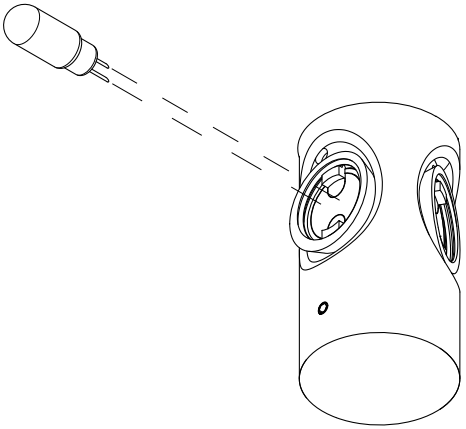

Fitting not pictured

Step 2. On the Lamping Barrel, take an LED Luminare Ⓖ ensuring prongs from are aligned with holes in the lampholder and gently insert the bi-pin.


Step 3. Repeat Step 2 twice with two more LED Luminares Ⓖ.

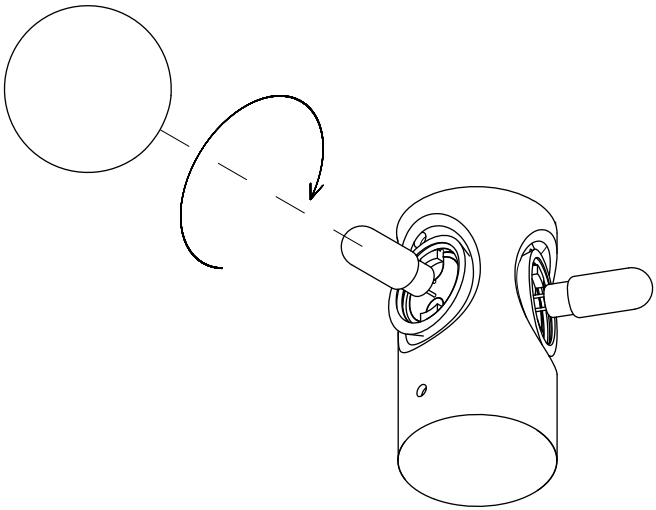

Fitting not pictured


Step 4. Take a Glass Diffuser Ⓕ and align it with the thread on the Lamping Barrel Assembly and gently fasten clockwise until resistance is encountered.

Step 5. Repeat Step 4 twice with two more Glass Diffusers Ⓕ.

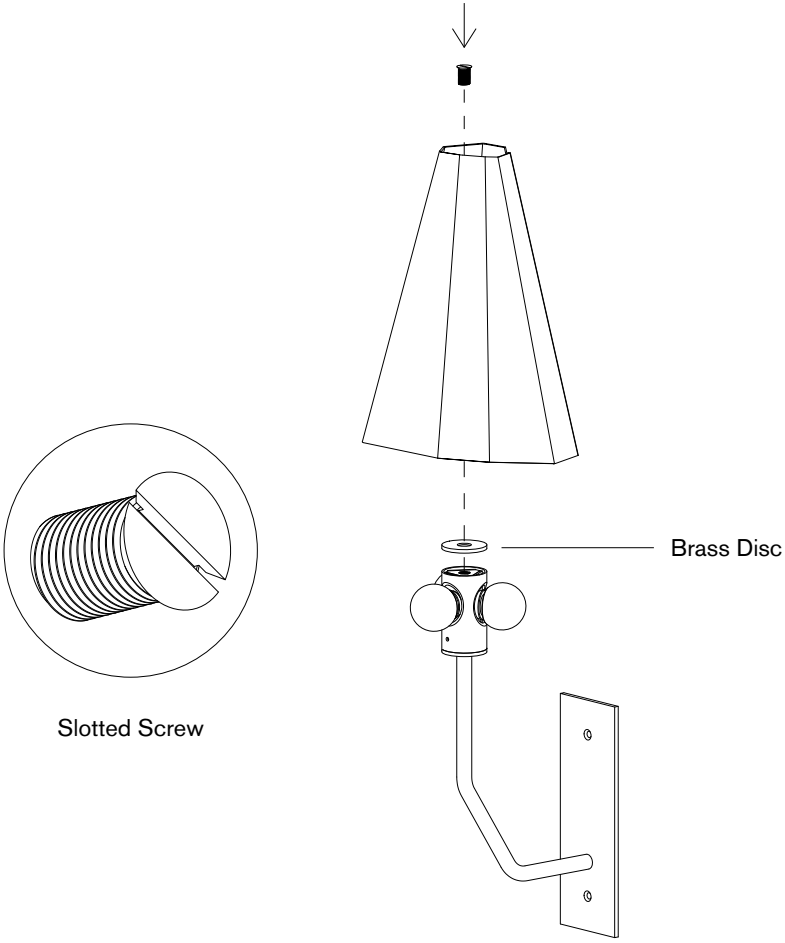


Step 6. On the Fitting Assembly Ⓐ, unscrew the Slotted Screw (pictured). The Slotted Screw secures the Brass Shade Ⓒ to the Fitting Assembly Ⓐ.


Step 7. Align the Brass Shade in the desired position by rotating it, then align it over the Lamping Barrel, ensuring the Brass Disc (pictured) is nested in between.

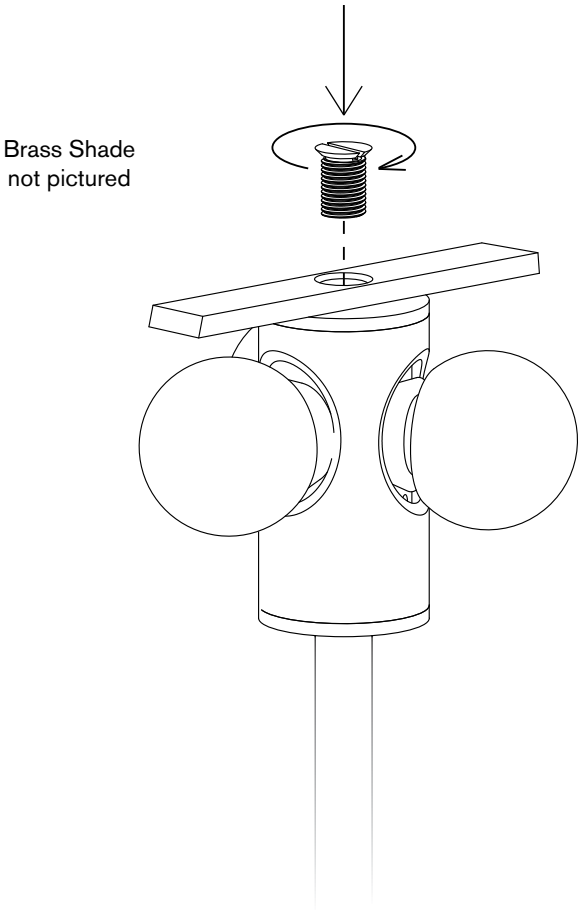

Step 8. Take a Glass Diffuser Ⓕ and align it with the thread on the Lamping Barrel Assembly and gently fasten clockwise until resistance is encountered.


Step 9. Repeat Step 4 twice with two more Glass Diffusers Ⓕ.

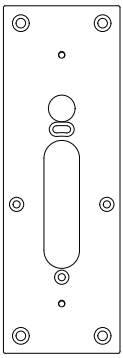

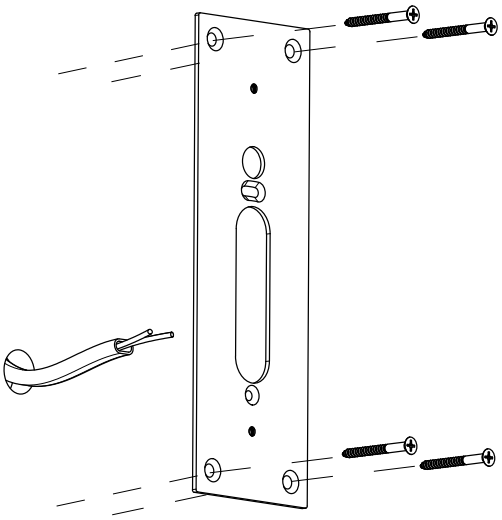


Step 10. Taking note of the top, osition Wall Plate Ⓑ in install location and trace the mounting points through plate.


Step 11. Affix suitable fasteners into substrate through Wall Plate Ⓑ.

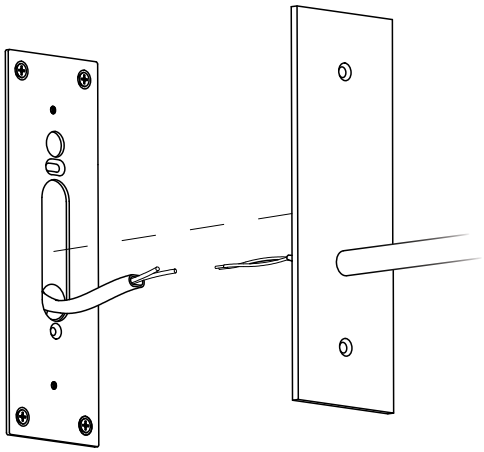

Step 12. Licenced electrician to wire fitting.

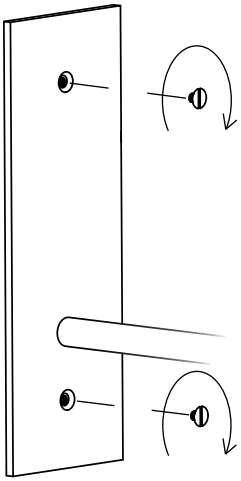

Step 13. Insert 2x Wall Plate Screw Ⓔ through fascia plate of Fitting Assembly Ⓐ and fasten clockwise into Wall Plate Ⓑ.

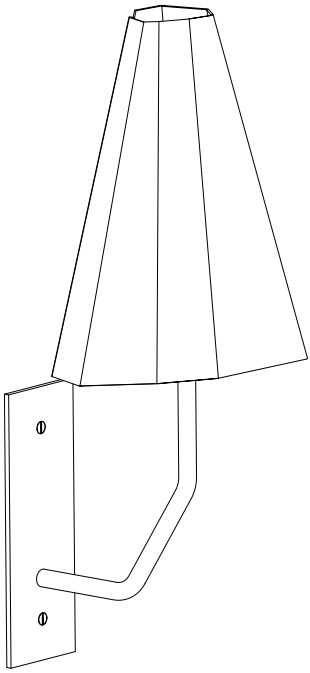

Step 14. Test the fitting by turning on power and/or by using dimming control, and enjoy.

